

Battery Calibration

(When you see this symbol on the battery charger)



1. When a battery is inserted in the charger, and the charger detects that calibration is recommended.

- The yellow light for the pocket blinks.
- A split battery symbol and the pocket number for the battery flashes on the charger display panel.



2. To calibrate batteries:

- Within ten seconds of the start of the blinking yellow light, press and release the number button for this pocket. The charger begins calibrating the battery.



- **To charge the battery now and calibrate the battery later:**
 - Do nothing when the yellow light begins blinking. After ten seconds, the charger continues with a normal charge cycle.