

Charge Controller Back-up Battery

- **Back-up controller in your emergency bag needs to be charged every 6 months.**
 1. Remove the back-up controller, batteries and clips from your emergency bag.
 2. Attach batteries to the back-up controller. The screen will say “charging”. It can take up to 3 hours to fully charge.



3. When the back-up battery is fully charge, the screen will say “charging complete”. Disconnect the batteries and the controller should automatically go into “sleep mode”. Place controller, battery clips and a new set of batteries back into your emergency bag.

